

40-416 & 40-416A Parts to be removed TR1 1050

- Flywheel cover (Stator housing)
- Flywheel
- Bendix & Bendix shaft
- All electrical sensors (Including earth plate)
- Intake manifold
- Exhaust manifold
- PTO coupler
- Air box
- Ignition coils
- Motor mount brackets
- Throttle body
- Breather line hoses (from oil cooler to valve cover)
- Starter
- Engine lift brackets
- Oil drain hose (Attached to oil pan)
- Thermostat & Housing

40-416 & 40-416A Parts to leave on.

- Valve cover
- Oil cooler
- Oil pan
- Oil pump
- Oil pickup tubes x 2
- Dip stick
- Valve cover screw on cap
- PTO Shaft assembly (Inside engine)
- Chain tensioner
- Anode