

Yamaha 1.8L HO/SHO Core Removal List:

- Oil Pan
- Exhaust
- Oil Cooler
- Oil Filter
- Supercharger
- Thermostat Housing & Thermostat
- Mounts (4)
- Ignition Coils (4)
- Plastic Engine Cover
- Generator Cover
- Flywheel Magneto
- Drive Coupling
- Idle Gear Assembly
- Starter Clutch
- Oil Separator Tank Cover
- Water Jacket Cover
- Earth Plate
- Engine Temperature Sensor
- Thermoswitch
- Knock Sensor
- Oil Pressure Switch
- Baffle Plate
- Transfer Shaft & Nut
- Oil Pump
- Oil Pipe
- Connectors (2)
- Bolt
- Circlip
- Oil Pump Drive Gear
- Supercharger Drive Gear Assembly
- Starter