

# *Kawasaki 4 Stroke Parts Removal Guide*

Please remove the following parts:

- Oil Pan & Oil Pump System
- Exhaust Manifold & studs from block.
- Intake Manifold and studs from block.
- All electrical components, including sensors.
- Pto coupler
- Dip Stick Tube
- Oil Filter Cap
- Oil Cooler
- Flywheel
- Crank Pick up gear/ timing sensor.

**Warning!!**

Any extra parts left on motor will NOT be returned.



Figure 1:  
Oil Pan cover is removed.



Figure 2:  
Oil pan covers removed .



Figure 3:  
Timing chain is left inside of engine.



Figure 4:  
Left side of motor.

# *Kawasaki 4 Stroke Parts Removal Guide*



Figure 5:  
All electronics are removed.

Complete exchange motor should resemble all of the referenced pictures.

Any items left on the core that is not part of the engine exchange will be discarded.



Figure 6:  
Intake side of the motor.

Leave all brass nipples on block.

Leave valve cover on block.